





# Yale Real Living™ Push Button Deadbolt Quickstart Guide




For Technical Assistance call Yale:  
1-800-810-WIRE (9473).

For more information go to: [www.yalerealliving.com](http://www.yalerealliving.com)

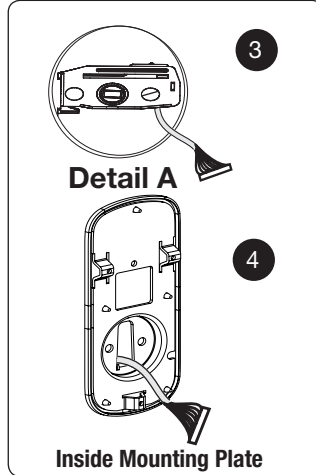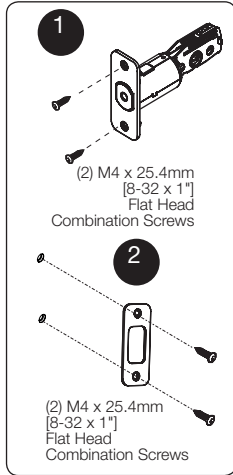

Outside Escutcheon

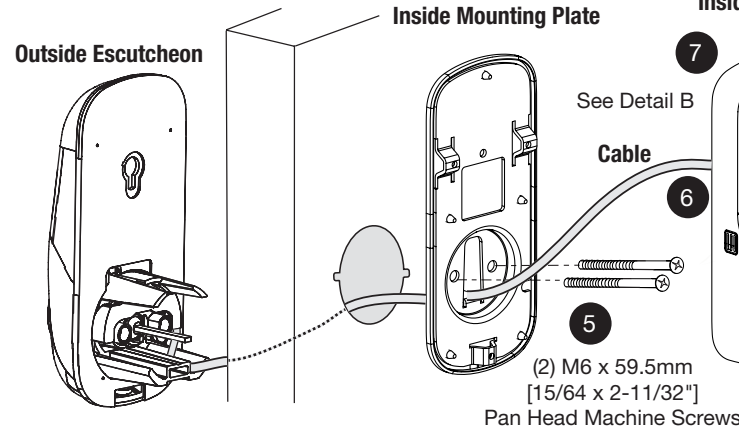


Inside Mounting Plate


See Detail B

Cable

Inside Escutcheon

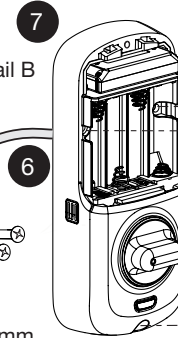


Battery Cover

 

8

(3) M4 x 8mm [8-32 x 5/16"] Pan Head Screws

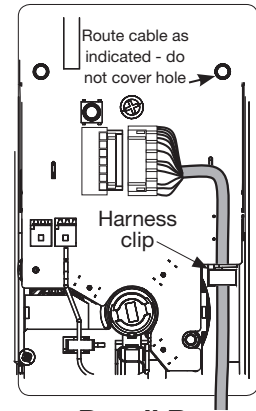

Detail B

## Components

- Quick Start Instructions
- Installation Instructions
- Door Marker
- Outside Escutcheon
- Inside Escutcheon Assembly:
  - Inside Mounting Plate
  - Inside Escutcheon
  - Battery Cover
- 4 AA Alkaline Batteries
- Bolt
- Strike Plate
- Screw Pack (7 screws)
- 2 Keys

## Tools Needed

- Phillips #2 screwdriver
- 2-1/8" (54mm) hole saw
- 1" (26mm) boring bit
- 7/64" (2.5mm) drill bit
- Chisel & hammer

## Directions

1. Install bolt in door.  
NOTE: The bolt must be in a retracted position when installing the lockset.  
Attach with two (2) M4 x 25.4mm screws supplied.
2. Install strike on the door frame.
3. Route the cable through 2-1/8" diameter hole.  
NOTE: Cable must go **under** bolt and through.  
See Detail A.
4. Insert outside escutcheon while routing cable through inside mounting plate's 1/2" hole; insert mounting plate "tongue" into bottom slot of outside escutcheon.
5. Secure inside mounting plate to outside assembly using (2) M6 x 59.5mm pan head machine screws.  
Do not over-tighten.
6. Attach cable assembly to the inside escutcheon printed circuit board (See Detail B above).



## CAUTION:

Use care when assembling to ensure that the cable lies against the back recessed area of the inside escutcheon.

Position and bend the cable, using the harness clip as shown in Detail B to prevent binding when installing the escutcheon over the mounting plate.

7. Slide inside escutcheon over mounting plate.

8. Install and secure using (3) M6 x 9.5mm pan head machine screws through the battery housing into the mounting plate.

9. Insert four (4) AA alkaline batteries. The lock responds with a series of beeps and flashes.

*Note: Refer to programming instructions prior to completion of step 10.*

10. Install battery cover and tighten Phillips head screw.





# Yale Real Living™ Push Button Deadbolt Quickstart Guide




For more information go to: [www.yalerealliving.com](http://www.yalerealliving.com)

## Programming

1. Enter the 4 - 8 digit Master PIN code\* followed by the **#** key.
2. Enter digit corresponding to the function to be performed followed by the **#** key.
3. Press the **\*** key to complete the process and conclude the programming session.

Note: If the lock is connected to a network controller, it is recommended that it is programmed through the centralized user interface (PC or hand-held device) to ensure communication between the lock and the controller unit.

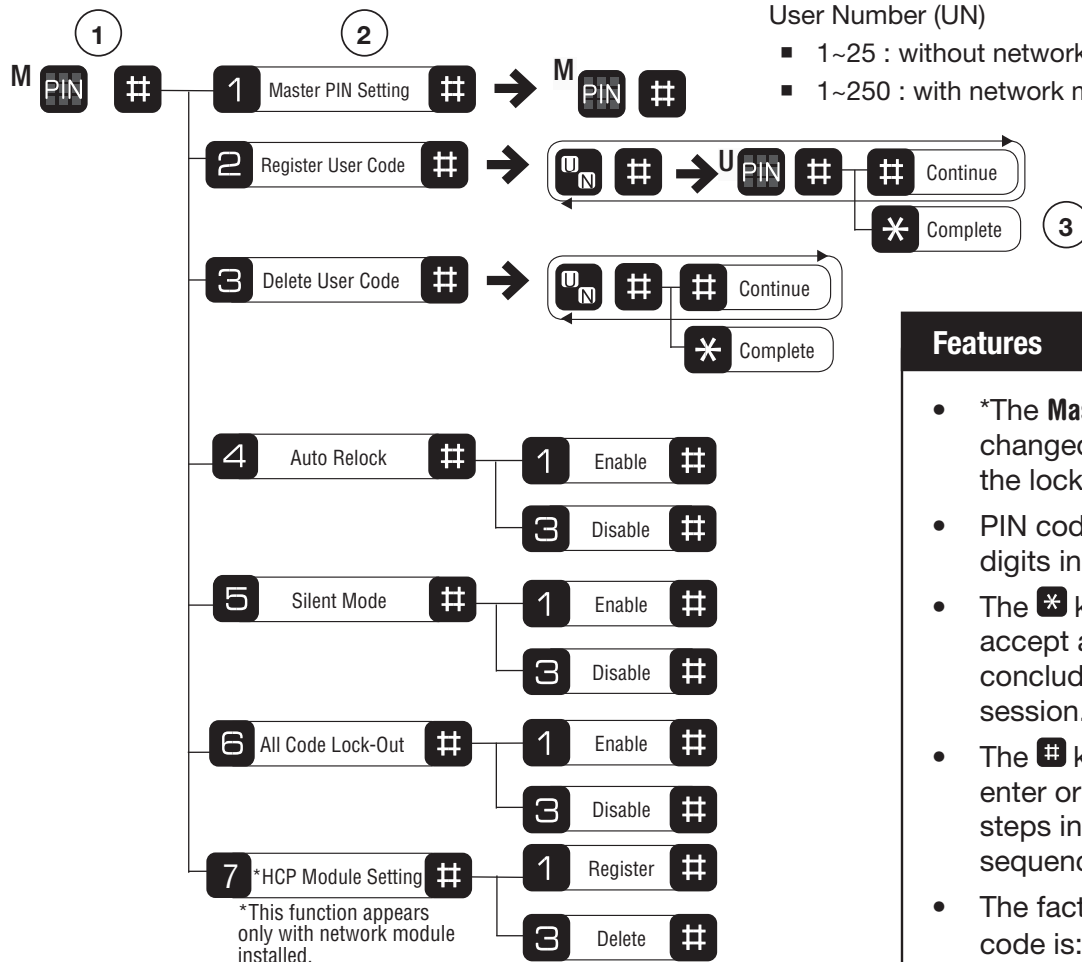

## Features

- \*The **Master PIN** code must be changed prior to programming the lock.
- PIN codes can be 4 to 8 digits in length.
- The **\*** key is used to enter or accept an entry, and also to conclude a programming session.
- The **#** key is used either to enter or to continue additional steps in a programming sequence.
- The factory default **Master PIN** code is: 1 2 3 4 5 6 7 8.


\*Default Master Pin Code must be changed prior to programming of lock.

## Open Door With PIN Code

1. Enter PIN code.



2. Touch the **\*** key to confirm the selection.

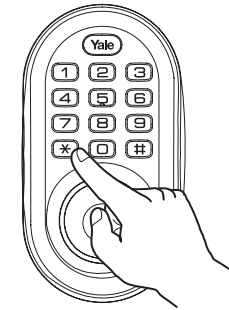

3. Unlock.



For Technical Assistance call Yale:  
1-800-810-WIRE (9473).